





Safety Instructions

-  Use domestic heaters with maximum power of 2400W.
-  Connect the Kiwi Warmer to a socket-outlet with earthing connection.
-  Do not plug multiple devices, multiboxes, aquariums or health & safety-related devices into the Kiwi Warmer.
-  Always follow the heater manufacturer's safety instructions.
-  Don't use the Kiwi Warmer in areas 2000m and more above sea level.

Warranty


Kiwi Warmer's warranty against manufacturing or shipping faults lasts from 12 months from the purchase date. Please keep your receipt!

Technical Support

support@kiwi-warmer.nz



**Kiwi
Warmer**

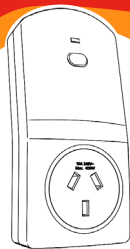

Quick Start Guide

Your new Kiwi Warmer turns power on and off to your heater to maintain your desired room temperature.


You may set different Kiwi Warmers in different rooms, each with their own desired temperature, all managed from your mobile device.

- 1 Download the Kiwi Warmer app from the Apple or Google Play store.



- 2 Plug your Kiwi Warmer device into a wall socket.
- 3 Make sure your mobile device is connected to a 2.4 GHz WiFi network.
- 4 Start the app, select **Add new device**, and follow the app's instructions.

- 1 Status light
- 2 Mode button
- 3 Domestic heater (under 2400W)

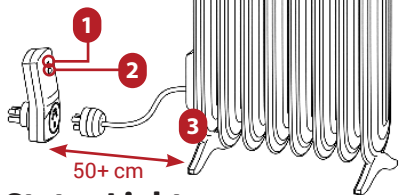

Status Lights

- Blue:** Not set up
White: Set up mode
Green: Up and running (no power)
Orange: Up and running (heating)
Changing: Updating settings
Red: Error

Red light? Power will be cut to the heater until you re-initialise the Kiwi Warmer.

Please ensure:

- 1 You have a permanent WiFi connection (2.4 GHz).
- 2 The heater has built-in timers and regulators turned off, while set to maximum heat.

About Kiwi Warmer

Kiwi Warmer governs each room's temperature in your home, minimising wasted energy while optimising comfort. You can set, adjust and monitor Kiwi Warmer-enabled rooms from your mobile device. It uses weather forecasts, and learns about the specifics of your home – such as size and insulation metrics – all to keep you warm, and save you money.

To reset a Kiwi Warmer:

- 1 Unplug the Kiwi Warmer from the wall.
- 2 Hold the Mode button in as you plug it back in – wait for the blue status light, then release.
- 3 The Kiwi Warmer restarts with a blue status light. Unplug the Kiwi Warmer for 45 minutes before re-use.

Kiwi Warmer Manual

For the full operator's manual, please download it here:

www.kiwi-warmer.nz/manual

Privacy

Kiwi Warmer does not share personal, identifiable data with any system other than your mobile device. Your privacy and security is important to us.